


# (MS-100 CONFIGURATION)

## FRONT & BACK PANEL DESCRIPTION

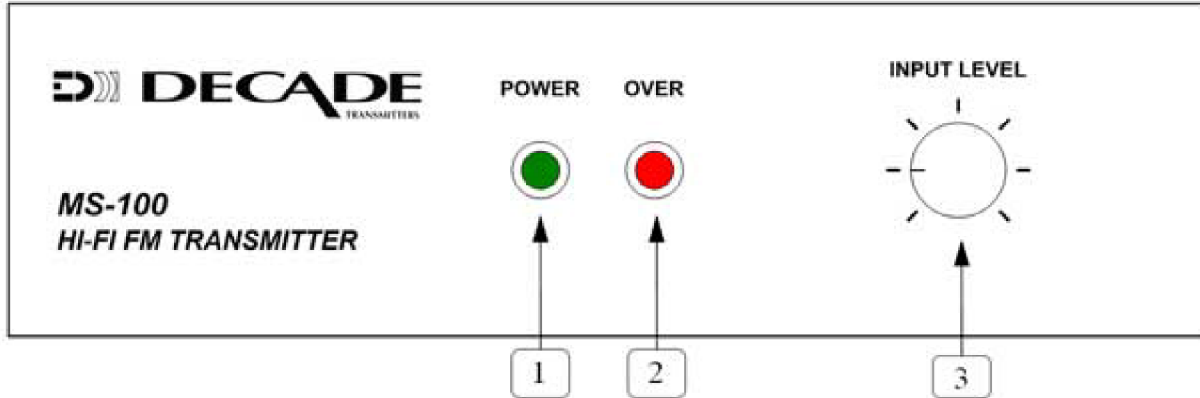

1. **Power:** Indicates that the AC power has been activated.
2. **Over:** Indicates over modulation (100% and more).
3. **Input level:** Controls the audio level that is applied to the transmitter's audio section.
4. **AC input:** This is where you plug the AC adaptor (furnished with the transmitter).
5. **BB:** When activated, the bass boost switch enables a circuitry that will produce a 6dB gain from 20Hz to 150Hz. (Stereo model only)
6. **ST:** When activated, the stereo switch enables a digital circuitry that will produce stereo broadcasting. (Stereo model only)
7. **FREQUENCY SELECT :** Frequency programming switch
8. **AUDIO INPUTS:** The audio inputs signals.
9. **The transmitting telescopic antenna.**

