

## Adjusting Clutch on One-Hand Mic Stand

Step 1: Release the thread cap by screwing it out.



Step 3: Adjust the clutch as follows:  
To Loosen: Turn the hexagon nut to the left.  
To Tighten: Turn the hexagon nut to the right.



Step 2: Press the clutch and pull out the extension tube.

2A



2B

